

Contents

Introduction.....	1
Read the Rider's Handbook.....	1
Hazard Symbol and Terms in the Rider's Handbook.....	2
Safety Information	5
Safe Riding.....	6
Super X Design Characteristics.....	6
Safe Riding Practices	7
Carrying a Passenger.....	11
Transporting the Super X	12
Protective Apparel.....	12
Product Modifications	13
Gross Vehicle Weight Rating	14
Loading.....	15
Selecting and Installing Accessories	17
Gasoline and Exhaust Gases	18
Parking	19
Maintenance	20
Safety and Vehicle Information Labels.....	22

Reporting Safety Defects	25
Product Description	27
Vehicle Components.....	28
Vehicle Identification Number (VIN)	30
Engine Identification Number	31
Key Identification Number	32
Instruments and Controls	35
Location	35
Key	37
Fork Lock	37
Main Switch	38
Instrument Pod.....	40
Indicator Lights.....	40
Headlamp High Beam Indicator	41
Check Engine Indicator	41
Turn Signal Indicator.....	41
Neutral Indicator	42
Low Oil Pressure Indicator.....	42
Low Battery Voltage Indicator.....	42
Low Fuel Indicator	43

Speedometer	43
Odometer/Trip Meter.....	43
Odometer/Trip Meter Function Button	44
Tachometer	44
Fuel Gauge	44
Handlebar Controls	45
Left Side Handlebar Controls	45
Clutch Lever	45
Left Mirror.....	45
Headlamp Dimmer Switch	46
Turn Signal Switch	46
Horn Button	46
Right Side Handlebar Controls	47
Front Brake Lever	47
Throttle Control Grip.....	47
Right Mirror.....	47
Engine Stop/Run Switch.....	48
Emergency Flasher Switch	48
Electric Starter Button.....	49
Foot Controls.....	49

Gear Shift Pedal	49
Rear Brake Pedal.....	50
Fuel Cap	50
Rear Suspension Adjustment.....	51
Location of Adjusters	52
Factory Adjustment Settings.....	52
Adjusters and Their Setting Ranges	52
Changing Adjustment Settings	53
Changing Preload Adjustment.....	54
Changing Damping Rate Adjustment	57
Effects of Rear Suspension Adjustments.....	58
Sidestand	61
Saddles	61
Pre-Operation Check.....	63
Fuel.....	64
Fuel Level	64
Fuel Hose, Rail, and Connections.....	64
Evaporative Emission Control System (California model only).....	64
Engine Oil Level	65

Tires	66
Tire Pressure	66
Tire Condition	67
Tread Depth	67
Drive Belt	68
Steering.....	68
Hydraulic Controls — Clutch and Brakes.....	68
Check Hoses and Connections	68
Check Front Brake & Clutch Fluid Level.....	69
Check Rear Brake Fluid Level.....	69
Check Clutch Lever Movement.....	69
Check Front Brake Lever Movement.....	70
Check Rear Brake Pedal Movement.....	70
Check Brake Pads	71
Throttle Control Grip and Cables.....	71
Electrical Equipment	72
Engine Stop/Run Switch.....	72
Instrument Pod	72
Headlamp.....	73
Brake Light.....	73

Running Lights	73
Turn Signals	73
Sidestand	74
Fasteners	74
Operation and Riding	77
Operating During Break-In Period (First 500 Miles)	78
Fueling and Fuel Fill Height	79
Starting the Engine	80
Jump-Starting.....	82
Shifting Gears.....	84
Recommended Shift Points.....	87
Accelerating	88
Braking.....	89
Stopping the Engine	90
Parking.....	91
Maintenance	95
New Motorcycle Break-In Maintenance	96
Periodic Maintenance Intervals	96
Engine Oil.....	99
Change Oil and Oil Filter	99

Check Oil Level.....	101
Air Filter Element	103
Drive Belt	104
Check Drive Belt Tension	104
Adjust Drive Belt Tension.....	105
Check Drive Belt Condition.....	106
Throttle	107
Check Throttle Control Grip and Cables.....	107
Adjust Throttle Freeplay.....	107
Fuel Hose, Rail, and Connections	108
Evaporative Emission Control System (California model only).....	108
Oxygen Sensor	109
Hydraulic Controls — Clutch and Brakes.....	110
Check Hoses and Connections	110
Check Front Brake & Clutch Fluid Level.....	110
Check Rear Brake Fluid Level.....	111
Add Hydraulic Fluid	111
Check Clutch Lever Movement.....	112
Check Front Brake Lever Movement.....	113

Check Rear Brake Pedal Movement	113
Check Brake Pads.....	114
Spark Plugs.....	114
Inspect Spark Plugs.....	114
Remove Spark Plugs	115
Replace Spark Plugs	116
Saddles	117
Tandem Saddle.....	117
Rider's Saddle.....	118
Battery.....	119
Remove Battery.....	120
Charge Battery	121
Install Battery	122
Electrical Equipment.....	123
Replace Fuse	123
Check Engine Stop/Run Switch.....	124
Check Instrument Pod Lights	124
Replace Instrument Pod Light Bulb.....	125
Check Headlamp	125
Replace Headlamp Sealed Beam Lamp	126

Check Brake Light	126
Replace Brake/Tail or License Plate Light Bulb.....	127
Check Running Lights	127
Check Turn Signals	128
Replace Turn Signal/Running Light Bulb.....	128
Steering.....	129
Inspect Steering Movement	129
Inspect Steering Head Bearings	129
Tires	130
Check Tire Pressure	130
Check Tire Surface Condition.....	130
Check Tread Depth	130
Wheels	131
Check Spokes.....	131
Remove Front Wheel.....	132
Inspect Front Wheel Bearings.....	133
Install Front Wheel	134
Remove Rear Wheel.....	135
Inspect Rear Wheel Bearings.....	137
Install Rear Wheel	138

Align Rear Wheel.....	139
Sidestand	141
Fasteners	141
Road Test	142
Cleaning and Storage	145
Cleaning	145
Washing and Drying.....	146
Waxing, Polishing, and Applying Protectants.....	148
Repairing Painted Surface Damage	149
Storage.....	149
Preparing for Storage.....	150
Choose an Adequate Storage Location	150
Clean and Protect the Motorcycle.....	150
Stabilize Fuel	151
Protect Engine Components	151
Inflate Tires	152
Remove, Clean, and Store Battery	152
Park and Cover the Motorcycle	153
Maintaining During Storage	153
Removing from Storage	153

Our Tradition of State of the Art..... 157

- Traditions Alive Today 160
 - The 1999 Super X 160
 - The Company 166
- The Road from 1993 through 1998..... 172
- The Trail from 1876 through 1931..... 185
 - 1876-1910: The Beginnings of Excelsior..... 186
 - 1911-1917: The Joining of Forces 190
 - 1918-1925: Excelsior-Henderson and The Super X... 210
 - 1926-1931: The Birth of the “Cruiser” 224

Specifications..... 235

- Fuel Specifications 238
- Engine Oil Specifications 239
- Torque Specifications..... 240
- Identification Numbers for Your Super X..... 242

Index 245